daylog eld

Driver Guide

Daylog ELD for iOS and Android

Keep this guide in the cab at all times.



daylog eld

01 · GETTING STARTED

Sign in and pick your truck

1 Open Daylog and sign in


Enter the driver ID and 6-digit PIN your carrier gave you. Forgot it? Tap “Need help?” to reach dispatch support.

2 Pick your truck

Search by unit, plate or VIN, select the truck and tap “Start shift”. If your carrier already assigned one, this step is skipped.

3 Connect the ELD device

Keep Bluetooth on. The app pairs with the in-cab device automatically and shows a green “ELD” badge when ready.

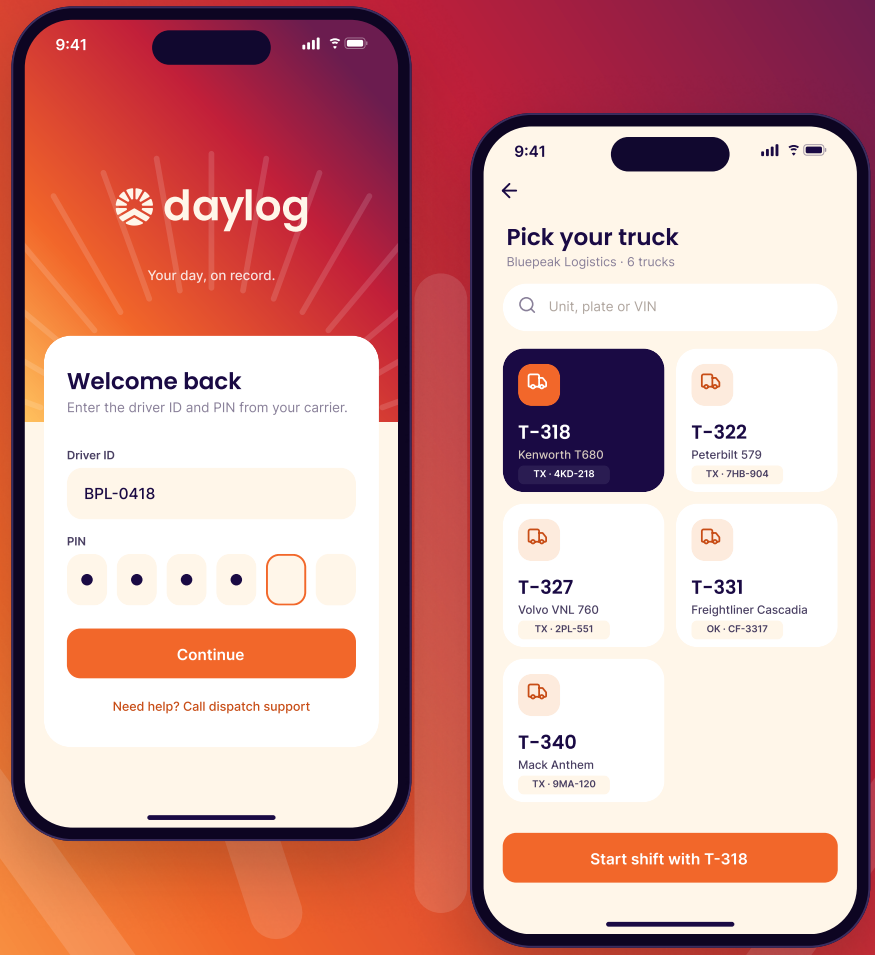

daylog eld

02 · YOUR DAY

Read your hours and change status

1 Check the day dial

The rings show drive (blue), shift (aqua) and cycle (green) time left. The number in the middle is your drive time.

2 Change duty status

Tap Off, Sleeper, Driving or On duty. Add a note when the app asks — for example “Pre-trip inspection”.

3 While moving

Driving is detected automatically. The screen switches to a large timer and status changes are locked until you stop.



daylog eld

03 · ROADSIDE INSPECTION

Show or send your records in seconds

1 Open Inspect


Tap Inspect in the bottom bar, then “Open view”. Hand the phone to the officer — the view is read-only and covers today plus the previous 7 days.

2 Send records

Under “Share records” tap Send to FMCSA. Choose web service (fastest) or email.

3 Add the officer’s comment

Type the output file comment the officer gives you, then tap “Send now”. A confirmation appears when the transfer is done.

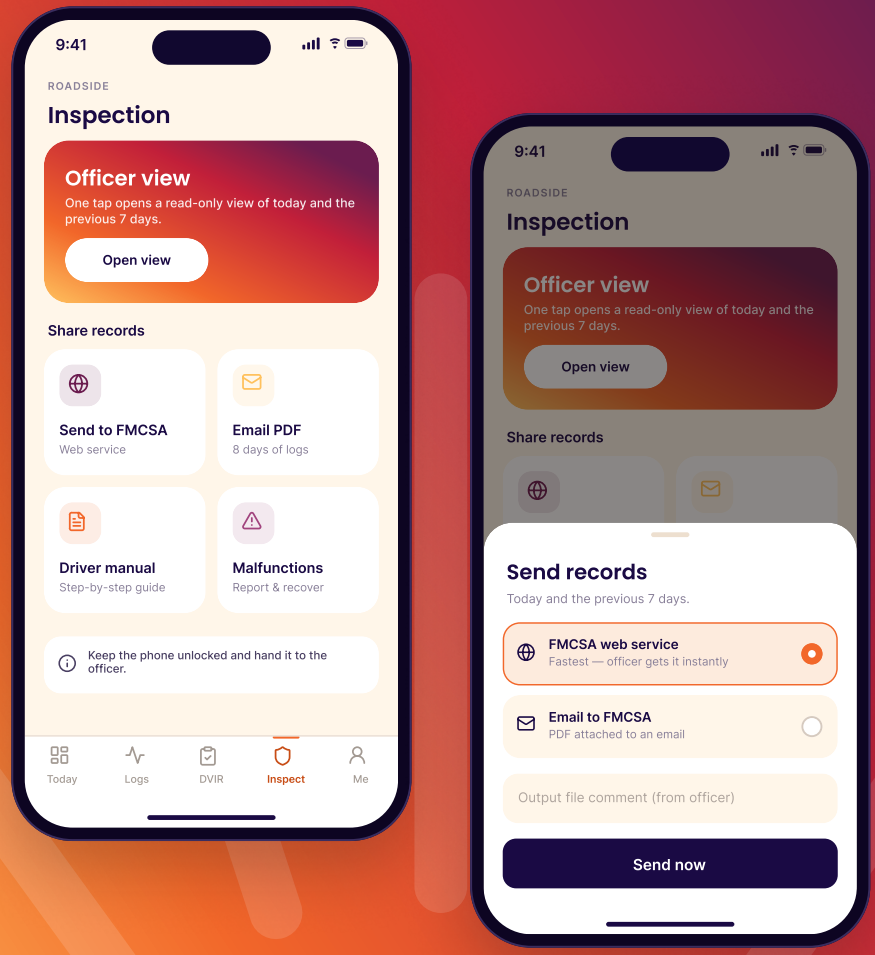

04 · REQUIREMENTS

What must stay in the cab

Under 49 CFR § 395.22(h), every carrier makes sure each driver has an ELD information packet in the vehicle:

- A user guide describing how to operate the ELD (this guide).
- An instruction sheet on transferring hours-of-service records to an authorized safety official.
- An instruction sheet on reporting ELD malfunctions and the recordkeeping steps while the ELD is out of service.
- A supply of blank paper graphs of duty status for at least 8 days.

Malfunction monitoring

§ 395.34 — Daylog ELD watches itself continuously and flags these malfunction codes:

P	Power compliance
E	Engine synchronization
T	Timing compliance
L	Positioning compliance
R	Data recording compliance
S	Data transfer compliance
O	Other ELD-detected malfunction